



APS
SHEET


SUPER
SHEET
COLLECTION




CrystalTM
PVC Laminates



APS-04 • PURE WHITE




APS-14 • IVORY WHITE



APS-11 • WHITE CAMEO

SUPER SHEET



APS-13 • SMOG GREY




APS-19 • ASH BARK



APS-18 • MUTED GREY

SUPER SHEET



APS-10 • RIVER REED




APS-05 • SANDY FAWN




WHISPERS
OF GENTLE
HUES


Gentle shades blended with solid strength for stylish, enduring interior applications.




APS-17 • LIGHT SKY



APS-09 • SILVER GREY



APS-16 • SKY TINT




APS-03 • ROSY PEACH




APS-08 • SMOKE GREY




APS-15 • BURNT GREY



APS-06 • SNOW WHITE




APS-20 • MINT GREEN




APS-02 • OPALINE GREEN

SUPER SHEET


SUPER SHEET




APS-07 • ICE CRYSTAL



APS-12 • ICED SILVER



APS-21 • ELEGANT GREY




APS-01 • MICA MATTE




SOLID NEUTRALS, MODERN IMPACT

Pure and serene solid laminates
crafted for modern minimalistic
interior spaces.

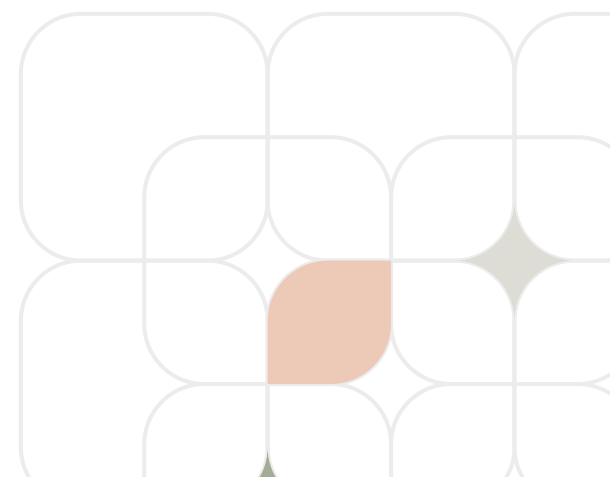



FEATURES

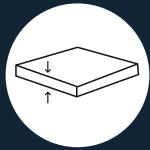

1.2 MM
THICKNESS



HIGH GRADE
SCRATCH
RESISTANCE



ANTI FINGER
PRINT



SATIN SMOOTH
FINISH



UV
PROTECTED



BORER PROOF &
TERMITE
PROOF



NO
CRACK

GENERAL USE & CARE GUIDE :

APS sheet are designed for easy maintenance and durability. Follow these guidelines for optimal performance:

1. Stain Removal: for stubborn stains, use mild household glass cleaners like Colin, Gently wipe the surface with a non-abrasive cloth.
2. Avoid Abrasive Cleaners: Refrain from using abrasive liquid cleaners, bleaches, or solvents, as they may harm the APS sheet surface. Clean with water and a non-abrasive cloth.
3. Thinner Usage: Do not apply thinner to APS sheets.


INSTALLATION INSTRUCTIONS :

1. Clean the dust particles from the surface of the substrate (Plywood, MDF, Foamboard) with a cloth, soft brush, sponge or sandpaper.
2. Apply the adhesive evenly with a brush, roller or adhesive spray on both the APS sheet and the substrate (Plywood, MDF, Foamboard).
3. When pressing on the APS sheet base (Plywood, MDF, Foamboard), use a soft-pressure roller or a normal pressing technique. Pressing must be done from the centre of the panel and moved to the sideline and corners of the panel.
4. Make sure the laminate is sufficiently pressed for almost 24-30 hours to reach full bond strength.

LIMITED WARRANTY :

APS Products undergo rigorous testing to ensure they are reasonably free of defects. When used and fabricated correctly, they will comply with applicable manufacturing specifications within realistic deviations. Prior to installation, we advise customers to thoroughly inspect products. The warranty excludes defects or non-compliance due to:

- Improper handling, transportation, or storage of APS sheet Incorrect installation or unintended usage.
- Lack of maintenance or exposure to high temperatures. Unauthorized alterations or outdoor applications.
- Exchanges are provided under reasonable circumstances. This brochure serves as a presentation guide, with actual colors potentially differing.

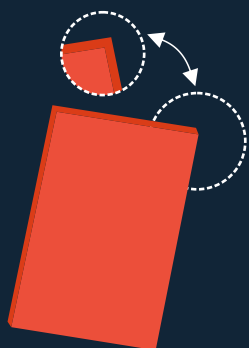


APS Full Body Core
(Top to bottom single colour material)

PANEL STRUCTURE



TTCR TECHNOLOGY

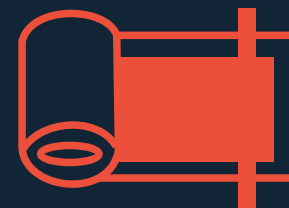

Zero Matt Finish
(Titanium and tungsten carbide roller)



CRYSTAL PVC LAMINATE

Survey No.202/1, Bharatnagar, Nava Sadulka Road.
At. Nava Sadulka, Morbi-363 642. (Guj.) INDIA.

E-mail : crystalpvclaminate@gmail.com

Web : www.crystalpvclaminates.com